

Extreme Parties LLC

Cotton Candy Safe Operating Instructions

Controls and Functions

1. Fill the floss head about 80% full, do not overfill.
2. Turn the two switches on, one is the motor and one is the heat switch
3. Turn the heat selector to the 12 o clock position for a starting point.
4. Once the machine is running it will start to make cotton candy.
5. Place cone on the nearest edge and twist to pull floss out of the machine and continue to twist.
6. Do not put hands into machine as the floss head is spinning.
7. If you need to adjust heat you can do so by turning the controls, if the machine starts to smoke The Heat switch is to high, turn control back counterclockwise.
8. Once done making cotton candy turns all switches off and unplug machine.
9. Do not use any chemicals to clean machine as it will cause Damage!
10. any Questions/Problems Contact Extreme Parties Right Away!